

# **SAP Printing**

## **Customer documentation**

### **Volume 3 : [DC142]**

## **Device-specific information**

for

- NRG
- IM C300  
IM C400  
IM C400SR

Version: 1.55

**Abstract:**

This document contains device-specific information about the device hardware and accessories, the configurable features, related limitations, and the commands necessary to configure the settings in the device type.

## **Contents**

|  |           |
|--|-----------|
| <b>1. GENERAL DEVICE INFORMATION.....</b>                            | <b>4</b>  |
| <b>2. DEVICE HARDWARE ACCESSORIES.....</b>                           | <b>4</b>  |
| <b>3. FEATURES &amp; COMMANDS .....</b>                              | <b>5</b>  |
| 3.1 INPUT BIN.....   | 6         |
| 3.1.1 Tag: # [PCL.01] INPUT BIN.....                                 | 7         |
| 3.2 PAPER TYPE.....  | 7         |
| 3.2.1 Tag: # [PCL.04] PAPER TYPE 1/2.....                            | 7         |
| 3.2.2 Tag: # [PCL.12] PAPER TYPE 2/2.....                            | 7         |
| 3.3 DUPLEX MODE .....  | 8         |
| 3.3.1 Tag: # [PCL.17] DUPLEX MODE 1/2.....                           | 8         |
| 3.3.2 Tag: # [PCL.03] DUPLEX MODE 2/2.....                           | 9         |
| 3.4 OUTPUT BIN .....   | 9         |
| 3.4.1 Tag: # [PCL.16] OUTPUT BIN 1/2.....                            | 9         |
| 3.4.2 Tag: # [PCL.02] OUTPUT BIN 2/2.....                            | 9         |
| 3.5 JOB OFFSET .....   | 9         |
| 3.5.1 Tag: # [PCL.13] JOB OFFSET.....                                | 9         |
| 3.6 STAPLING .....   | 10        |
| 3.6.1 Tag: # [PCL.02] STAPLING MODE.....                             | 10        |
| 3.7 PUNCHING .....   | 10        |
| 3.7.1 Tag: # [PCL.03] PUNCHING MODE.....                             | 11        |
| 3.8 RESOLUTION.....  | 11        |
| 3.8.1 Tag: # [PCL.01] RESOLUTION 1/2.....                            | 11        |
| 3.8.2 Tag: # [PCL.14] RESOLUTION 2/2.....                            | 11        |
| 3.9 COPIES.....  | 11        |
| 3.9.1 Tag: # [PCL.15] COPIES 1/2.....                                | 12        |
| 3.9.2 Tag: # [PCL.13] COPIES 2/2.....                                | 12        |
| 3.10 ECONOMODE (TONER SAVER).....                                    | 12        |
| 3.10.1 Tag: # [PCL.14] ECONOMODE (TONER SAVER).....                  | 12        |
| 3.11 AUTO TRAY CHANGE/SWITCHING .....                                | 12        |
| 3.11.1 Tag: # [PCL.12] AUTOTRAYCHANGE.....                           | 12        |
| 3.12 EDGE SMOOTHING/ENHANCEMENT .....                                | 13        |
| 3.12.1 Tag: # [PCL.11] SMOOTHING.....                                | 13        |
| 3.13 PAPER SIZE.....   | 13        |
| 3.14 ORIENTATION .....   | 14        |
| 3.15 LEFT MARGIN .....   | 14        |
| 3.16 TOP MARGIN .....  | 15        |
| 3.17 HORIZONTAL SPACING.....   | 15        |
| 3.18 VERTICAL SPACING .....  | 15        |
| 3.19 CHARACTER SET .....   | 16        |
| 3.20 FONT .....  | 16        |
| 3.21 COLOR PRINTING .....  | 17        |
| 3.21.1 Tag: # [PCL.30] COLOR : COLOR MODE.....                       | 17        |
| 3.22 SLIP SHEET .....  | 17        |
| 3.22.1 Tag: # [PCL.20] SLIPSHEET .....                               | 18        |
| 3.23 LOCKED PRINTING.....  | 18        |
| 3.24 EDGE-TO-EDGE MODE.....  | 18        |
| 3.24.1 Tag: # [PCL.07] EDGE-TO-EDGE MODE.....                        | 18        |
| 3.25 USERCODE .....  | 19        |
| 3.25.1 Tag: # [PCL.24] USERCODE.....                                 | 19        |
| 3.27 JOB SEPARATION .....  | 19        |
| 3.27.1 Tag: # [PCL.27] JOB SEPARATION.....                           | 19        |
| <b>4. LIMITATIONS.....</b>   | <b>19</b> |
| <b>5. (APPENDIX 1): PRINTER LANGUAGES.....</b>                       | <b>20</b> |
| 5.1 PCL.....   | 20        |
| 5.1.1 PCL macros .....   | 20        |
| 5.2 PCL .....  | 20        |
| <b>6. (APPENDIX POSS): SUPPORT OF POSS OPTIONS FOR [DC142] .....</b> | <b>21</b> |

### **Trademarks**

Microsoft®, Windows® are registered trademarks of Microsoft Corporation in the United States and/or other countries.

PostScript® is a registered trademark of Adobe Systems, Incorporated.

PCL® is a registered trademark of Hewlett-Packard Company.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights in those marks.

### **Important notice**

Parts of this manual are subject to change without prior notice.

## 1. General Device Information

This chapter contains general information about the devices.

### SAP device types to use:

- PCL-based **ZA0x**, ver 005+

### Device / Model name:

|             |           |  |
|-------------|-----------|--|
|             |           |  |
| • [DC142a]  | IM C300   |  |
| • [DC142b]  | IM C400   |  |
| • [DC142bF] | IM C400SR |  |

**Compatibilities/Emulation:** HP LaserJet 4050 PCL 5e

### Firmware (PCL):

**Note:** It is recommended to always use the latest firmware.

|               |            |       |                     |
|---------------|------------|-------|---------------------|
| <b>Speed:</b> | [DC142a]:  | B&W   | 30ppm/31ppm (A4/LT) |
|               |            | Color | 30ppm/31ppm (A4/LT) |
|               | [DC142b]:  | B&W   | 43ppm/45ppm (A4/LT) |
|               |            | Color | 40ppm/42ppm (A4/LT) |
|               | [DC142bF]: | B&W   | 43ppm/45ppm (A4/LT) |
|               |            | Color | 40ppm/42ppm (A4/LT) |

**Printer queue name** lp

## 2. Device Hardware Accessories

This chapter contains information about the standard or optionally available hardware accessories of the devices.

The Description column indicates the name of the unit, its properties, and, where applicable, the supported paper sizes and the sheet capacity. It also contains a list of features which can be configured on the device's front panel, as well as their initial factory defaults.

For more device-specific information, see also the device's corresponding Operating Instructions manual.

### Device Hardware Accessories

| Unit                        |          | Description  |
|-----------------------------|----------|--|
| <b>Memory (RAM)</b>         | standard | 2GB<br><br>Max memory: 2GB.<br><br>For detailed information about how much memory is needed for which resolution, please see (*).  |
| <b>Hard Disk</b>            | standard | - Capacity = 320 GB  |
| <b>Standard Paper Trays</b> |          | Standard input bins  |
| - Tray 1                    | standard | <ul style="list-style-type: none"> <li>• [DC142a]</li> <li>- Capacity = 250 sheets</li> <li>- Paper = see (*)</li> <li>• [DC142b]/[DC142bF]</li> <li>- Capacity = 550 sheets</li> <li>- Paper = see (*)</li> </ul> |
| <b>Paper Feed Units</b>     |          | (paper input) additional input trays   |
| - Tray 2                    | optional | <ul style="list-style-type: none"> <li>• <b>[Paper Feed Unit PB1170]</b></li> <li>- mounted below Tray 1</li> <li>- Capacity = 550 sheets</li> <li>- Paper = see (*)</li> </ul>                                    |
| - Tray 3                    | optional | <ul style="list-style-type: none"> <li>• <b>[Paper Feed Unit PB1170]</b></li> <li>- mounted below Tray 2</li> <li>- Capacity = 550 sheets</li> <li>- Paper = see (*)</li> </ul>                                    |

|                     |          |  |
|---------------------|----------|--|
| - Tray 4            | optional | <ul style="list-style-type: none"> <li><b>Paper Feed Unit PB1170]</b></li> <li>- mounted below Tray 3</li> <li>- Capacity = 550 sheets</li> <li>- Paper = see (*)</li> </ul>   |
| Bypass              | standard | (paper input)<br>Bypass Tray unit<br>- mounted at the front<br>- Capacity = 100 sheets<br>- Paper = see (*)  |
| Duplex unit         | standard | (paper path) needed for duplexing<br>- Paper = see (*)   |
| Standard Tray       | standard | (paper output) standard output tray  |
| Internal Tray       | standard | (paper output) standard output tray<br>- This is output bin " <b>Internal Tray 1</b> ".<br>- Capacity = 100 sheets<br>- Paper = see (*)<br><br>Only [DC142a/b] supports.   |
| Finisher Shift Tray | standard | (paper output) standard output tray<br>- Capacity = 250 sheets<br>Only [DC142bF] supports.   |
| 1 Bin Tray          | optional | (paper output)<br><ul style="list-style-type: none"> <li><b>[1 Bin Tray BN1040]</b></li> <li>- This is output bin "<b>Internal Tray 2</b>".</li> <li>- Capacity = 100 sheets</li> <li>- Paper = see (*)</li> </ul> Only [DC142a/b] supports. |

**Note:** (\*) = See the corresponding Operating Instructions manual.

#### Features configurable on the device front panel

The following table specifies those features that can be configured from the device's front panel, and their initial factory default settings. For those features whose setting is typically unlikely to be changed often, they can be configured once on the device front panel, and thus need no configuration from the SAP system side.

| Feature                        | Initial (factory) setting |
|--------------------------------|---------------------------|
| • Resolution                   | 600 dpi                   |
| • Symbol set                   | PC-8                      |
| • Tray priority                | Tray 1                    |
| • Duplex mode                  | Off                       |
| • Auto Continue                | Off                       |
| • Toner saving                 | Off                       |
| • Tray Switching               | Off                       |
| • Extended Auto Tray Switching | Off                       |
| • Sub Paper Size (*)           | Auto                      |
| • Copies                       | 1                         |
| • Letterhead Setting           | Auto detect               |
| • Edge to Edge Print           | Off                       |

**Note:** (\*) Paper size override function

## 3. Features & Commands

This chapter contains one section for each configurable feature.

The features are ordered by importance (how often used) and logical order (in the processing of the job).

- 3.1 - 3.7 = likely to be configured / changed
- 3.8 - 3.13 = unlikely to be changed often
- 3.14 - 3.21 = changing makes no sense or has no effect, or it must or should not be changed
- 3.22 - ... = additional features

Each section contains the following information about the feature:

1. Description of the **Feature**
2. Table of all possible **Settings** for this feature, and the **Values** necessary to specify in the **Command(s)**.  
An (\*) indicates that the interpretation of a value is subject to some restriction.
3. Dependencies/Constraints, other remarks
4. (for each Printer language and each related Command):
  - a. Tag (this is used to clearly mark where the Command is located in the device type)

b. Command syntax (see Appendix 1 below for general information on the printer language)

c. Initial command (as an example, and as it is shipped in the device type)

The entire initial command sequence of a particular device type is listed in the corresponding Volume 2.

**Note:** (Print controls)

For some of those features that can be specified per page, paragraph, or character, Print controls are defined. Where applicable, these are also listed in the Settings/Values table of the feature.

**General remarks:**

- The order in which the commands appear in the device type, and in which they are sent to the printer, is roughly the same as the one generated by our Windows drivers. To make sure the controller doesn't get problems, this order should be maintained. Please also note that some commands are sent automatically by the SAPscript driver, on which we cannot take any influence.
- Be aware that some settings may require modifications in more than 1 place !

**SAP-specific syntax issues:**

- A "#" at the beginning of a line is the SAP comment symbol. It means that the line will not be sent to the printer.
- Non-printable characters have to be entered as SAP escape characters.

**Notation conventions:**

- All commands are printed in fixed-spaced Courier font.
- The "^^^" indicates a place-holder for a value that has to be looked up from the Settings/Values table.
- <...> indicates a place-holder.
- A "##" in front of a line is to indicate that it should never be uncommented.
- [...] indicates optional text that can be omitted.

## 3.1 Input Bin

**Description:**

Specify the input bin from where to take the paper.

**Settings/Values:**

| ^^^ [PCL.01] | Print control | Interpretation   | Capacity (# sheets) |
|--------------|---------------|--|---------------------|
| 0            | TRYST         | Print out current page from currently active input bin (remains unchanged) | --                  |
| 7            | --            | Auto Tray Select   | --                  |
| 2            | TRYMN         | Bypass Tray (for sheet paper)  | 100                 |
| 3            | TRYME         | Bypass Tray  |                     |
| 8            | TRY01         | Tray 1<br>– [DC142a/b]<br>– [DC142bF]                                      | 250<br>550          |
| 1            | TRY02         | Tray 2 -- if [Paper Feed Unit PB1170 is installed]                         | 550                 |
| 4            | TRY03         | Tray 3 -- if [Paper Feed Unit PB1170 is installed]                         | 550                 |
| 30           | TRY04         | Tray 4 -- if [Paper Feed Unit PB1170 is installed]                         | 550                 |

**Dependencies/Constraints:**

- Tray 2,3,4 requires [Paper Feed Unit PB1170] to be installed.
- "OHP (Transparency)", "Envelope", "Thick3", "Labels" are only from Bypass.
- For the paper sizes supported by a particular bin, please see the corresponding Operating Instructions manual.
- If no Input bin select command is sent, the "Tray priority" setting of the device will be used.

**Note:** (Using the HPL2 ABAP list driver)

When using the HPL2 ABAP list driver, the PCL command for this setting will not become effective. You need to use the SAP mechanism to specify the Input Bin.

**Note:** (The SAP mechanism to specify the Input Bin)

• For ABAP & SmartForms:

Under SAP this setting can also be specified in the definition of the Output device.

The "Output attributes for list drivers" tab has a setting named "Paper tray".

The selectable values "Tray 1" | ... | "Tray 10" | "Single sheet" | "Envelopes" | "ManualEnvelope", correspond to the Print controls TRY01 | ... | TRY10 | TRYMN | TRYEN | TRYME.

This setting is only used by the HPL2 ABAP list driver.

If the standard ABAP list driver is used, the setting has to be specified in the command at [PCL.01] in the "Printer initialization" action in the Device type.

• For SAPscript:

The TRYxx print control to be used for a particular page can be specified in the definition of the Form used by the document, under "Page layout" -> <page> -> [Attributes] -> "Print attributes" -> "Resource name".

• For SAPscript and SmartForms under POSS:

The Input Bin can be configured using POSS option 01. For more information please refer to the section on POSS in Volume 2.

**Note:** (Forcing a particular Input bin for SAPscript)

As explained above, the desired input bin for SAPscript can be specified in the "Resource name" field of the definition of the SAPscript FORM. If it is not desired to assign a fixed input bin to a SAPscript FORM, then this field should be left empty, and the desired input bin should rather be specified in the "Printer initialization" action of the Device type, at tag [PCL.01]. This is, however, only possible if the SAPscript FORM does not specify an input bin yet. If the SAPscript FORM does already specify an input bin that is undesired, and if it cannot be changed, please contact Technical support for how to override it.

**Note:**

This command can NOT be used to specify the input bin for transparencies in connection with the slip sheet function. Instead, it needs to be commented out, and the PJI commands DOCBODYTRAY [PJI.20c] and possibly TRAY [PJI.20d] have to be used.

**3.1.1 Tag: # [PCL.01] INPUT BIN****Command syntax:**

- \e&I^H

**Initial / Example:**

- #\e&I7H

**3.2 Paper Type****Description:**

Paper type (Media type) should be configured for two reasons:

1. Different paper quality and thickness may require a different fusing temperature. This is called **Fuser control**.
2. The device keeps track of which paper type is contained in each input bin. When a certain paper type is specified in the print job, the controller can automatically select an appropriate input bin containing the requested paper type and paper size.

Both features can be configured through either the PCL command (preferred) or the PJI MEDIATYPE command.

**Settings/Values:**

| ^^^ [PJI.04b]   | ^^^ [PCL.12]     | Print control | Interpretation                         |
|-----------------|------------------|---------------|--|
| PLAIN           | 6WdPlain         | XTPLN         | Plain / Normal paper                   |
| PLAIN2          | 7WdPlain2        | -- (*)        | Plain2 paper                           |
| PLAINORRECYCLED | --               | -- (*)        | Plain / Normal paper or recycled paper |
| TRANSPARENCY    | 13WdTransparency | XTTRS         | Transparency/OHP sheet                 |
| SPECIAL         | 8WdSpecial       | XTSPC         | Special paper                          |
| SPECIAL2        | 9WdSpecial2      | -- (*)        | Special paper2                         |
| SPECIAL3        | 9WdSpecial3      | -- (*)        | Special paper3                         |
| THICK           | 6WdThick         | XTTHK         | Thick paper                            |
| THICK2          | 7WdThick2        | -- (*)        | Thick2 paper                           |
| THICK3          | 7WdThick3        | -- (*)        | Thick3 paper                           |
| MIDDLETHICK     | 12WdMiddlethick  | -- (*)        | Middle thick paper                     |
| CARDSTOCK       | 10WdCardstock    | XCST          | Cardstock                              |
| RECYCLED        | 9WdRecycled      | XTRCY         | Recycled paper                         |
| COLOR           | 6WdColor         | XTCLR         | Colored paper                          |
| LETTERHEAD      | 11WdLetterhead   | XTLTH         | Letterhead paper                       |
| PREPRINTED      | 11WdPreprinted   | XTPRN         | Preprinted paper                       |
| LABELS          | 7WdLabels        | XTLBL         | Labels                                 |
| BOND            | 5WdBond          | XTBND         | Bonds                                  |
| ENVELOPE        | 9WdEnvelope      | -- (*)        | Envelope                               |
| WATERPROOF      | 11WdWaterProof   | -- (*)        | Waterproof paper                       |
| COATED          | 7WdCoated        | -- (*)        | Coated paper                           |

**Note:** (\*): Currently not supported by a Print Control.

**Dependencies/Constraints:**

- For the paper types supported by a particular bin, please see the corresponding Operating Instructions manual.

**3.2.1 Tag: # [PJI.04] PAPER TYPE 1/2****Command syntax:**

- @PJI SET FUSERCONTROL = ^^^ \r\n
- @PJI SET MEDIATYPE = ^^^ \r\n

-- [PJI.04a] -- This command is NOT supported by this device.

-- [PJI.04b]

**Initial / Example:**

- #@PJI SET FUSERCONTROL = PLAINPAPER \r\n
- #@PJI SET MEDIATYPE = PLAIN \r\n

**3.2.2 Tag: # [PCL.12] PAPER TYPE 2/2****Command syntax:**

- \e&n^^^

**Note:** The value ^^^ has the following structure: "<decimal length of keyword> W <keyword>"; the <keyword> starts with a "d".

**Initial / Example:**

- #e&n6WdPlain

### 3.3 Duplex Mode

**Description:**

Duplex means printing on both sides of a sheet of paper.

Depending on the **Binding edge** (the edge of the page that would be used for binding the document), there are 2 different orientations of the rear page with respect to the orientation of the front page possible and necessary.

There are two different notions of indicating the binding edge.

- The notion of **Long-/Short-edge binding** is independent of the orientation of the contents of the pages.
- The notion of **Side (Left-edge) / Top binding** is related to the above through the orientation of the printout, as follows:

|            | Portrait | Landscape |
|------------|----------|-----------|
| Long-edge  | Side     | Top       |
| Short-edge | Top      | Side      |

**Settings/Values:**

| ^^^ [PJL.17a] | ^^^ [PJL.17b] | ^^^ [PCL.03] | Print control | Interpretation                      |
|---------------|---------------|--------------|---------------|-------------------------------------|
| OFF           | --            | 0            | SPMSI         | Simplex                             |
| ON            | LONGEDGE      | 1            | SPMDU         | Duplex, Long-edge binding           |
| ON            | SHORTEDGE     | 2            | SPMTU         | Duplex, Short-edge binding (Tumble) |

**Dependencies/Constraints:**

- Duplexing requires a Duplex unit.
- Duplex is disabled for these Media types: "Thick3", "Transparency", "Labels", "Waterproof", "Coated" and "Envelopes".
- The Duplex unit may not support all paper sizes; see chapter "Device Hardware Accessories" above.
- Duplex is disabled when "Slip sheet printing" is active.

**Note:** (Using the HPL2 ABAP list driver)

When using the HPL2 ABAP list driver, the PCL command for this setting will not become effective.

You need to use the SAP mechanism to specify the Duplex mode.

**Note:** (The SAP mechanism to specify the Duplex mode)

- For ABAP & SmartForms:

Under SAP this setting can also be specified in the definition of the Output device.

The "Output attributes for list drivers" tab has a setting named "Print mode".

The selectable values are: DEFAULT, SIMPLEX, DUPLEX, and TUMBLE DUPLEX.

This setting is only used by the HPL2 ABAP list driver.

If the standard ABAP list driver is used, the setting has to be specified in the command at [PCL.03] in the "Printer initialization" action in the Device type.

- For SAPscript:

The Duplex mode to be used for a particular page can be specified in the definition of the Form used by the document, under

"Page layout" -> <page> -> [Attributes] -> "Print attributes" -> "Print mode".

The selectable values are: <empty>, "S", "D", "T".

- For SAPscript and SmartForms under POSS:

The Duplex Mode can be configured using POSS option 04. For more information please refer to the section on POSS in Volume 2.

**Note:** (Forcing a particular Duplex mode for SAPscript)

As explained above, the desired duplex mode for SAPscript can be specified in the "Print mode" field of the definition of the SAPscript FORM. If it is not desired to assign a fixed duplex mode to a SAPscript FORM, then this field should be left empty, and the desired duplex mode should rather be specified in the "Printer initialization" action of the Device type, at tag [PCL.03]. This is, however, only possible if the SAPscript FORM does not specify a duplex mode yet. If the SAPscript FORM does already specify a duplex mode that is undesired, and if it cannot be changed, please contact Technical support for how to override it.

#### 3.3.1 Tag: # [PJL.17] DUPLEX MODE 1/2

These commands are not necessary.

**Command syntax:**

- @PJL SET DUPLEX = ^^^ \r\n -- [PJL.17a]
- @PJL SET BINDING = ^^^ \r\n -- [PJL.17b]

**Initial / Example:**

- #@PJL SET DUPLEX = ON \r\n
- #@PJL SET BINDING = LONGEDGE \r\n

**Note:** If both PJL command and PCL command are sent, the PCL setting takes precedence over the PJL setting.



### 3.3.2 Tag: # [PCL.03] DUPLEX MODE 2/2

**Command syntax:**

- \e&I^^S

**Initial / Example:**

- #e&l0S

## 3.4 Output Bin

**Description:**

The output receptacle (bin, tray) for the printed paper.

**Settings/Values:**

| ^^^ [PCL.16]  | ^^^ [PCL.02] | Print control  | Interpretation   | Capacity (# sheets) |
|---------------|--------------|----------------|--|---------------------|
| --            | 0            | --             | Default output tray (as specified from the device's front panel) | --                  |
| UPPER         | 1            | TROST<br>TRO01 | Standard Tray/ Internal Tray 1                                   | 100                 |
| FINISHERSHIFT | 101          | TRO03          | Finisher Shift Tray  | 250                 |
| INNER         | 100          | TRO02          | Internal Tray 2<br>- if [1 Bin Tray BN1040] is installed         | 100                 |

### 3.4.1 Tag: # [PCL.16] OUTPUT BIN 1/2

**Command syntax:**

- @PCL SET OUTBIN = ^^ \r\n

**Initial / Example:**

- #@PCL SET OUTBIN = xxx \r\n

**Note:** If both PCL and PCL commands are sent, the PCL setting takes precedence over the PCL setting.

### 3.4.2 Tag: # [PCL.02] OUTPUT BIN 2/2

**Command syntax:**

- \e&I^^G

**Initial / Example:**

- #e&l1G

## 3.5 Job Offset

**Description:**

There are several mechanisms conceivable to separate multiple copies of the same job. For separating multiple jobs from each other, refer to the section "Job Separation " below. Job offset can be configured for each job individually through the PCL JOBOFFSET variable. In either case, two consecutive stacks of output can be separated through sheet **rotation** or **shifting**.

**Settings/Values:**

| ^^^ [PCL.13] | Interpretation                                  |
|--------------|---|
| OFF          | No offset.                                      |
| SHIFT        | Output is offset side-wise versus the previous. |

**Dependencies/Constraints:**

- Shifting requires a Finisher Shift Tray .
- The Finisher Shift tray always apply shifting; this cannot be switched off.
- Stapled output is not shifted.

### 3.5.1 Tag: # [PCL.13] JOB OFFSET

**Command syntax:**

- @PCL SET JOBOFFSET = ^^ \r\n

**Initial / Example:**

- #@PCL SET JOBOFFSET = OFF \r\n

## 3.6 Stapling

### Description:

Set the Stapling mode. Paper output can be stapled automatically.

One can configure the **number** of staples (1/2), and their **position** (at which corner/edge) and **orientation** (vertical/horizontal/slanted).

The command to be used also depends on the orientation of the document.

The stapling unit is part of the Finisher unit.

Due to mechanical reasons of the stapling unit, only certain modes are possible. See also the device's corresponding Operating Instructions manual.

The **physical** position and orientation of the staple(s) is determined and possibly restricted by the mechanism of the Finisher.

However, the printer controller can implement multiple **logical** staple positions and orientations, by combining the physical possibilities, the choice of SEF/LEF paper, and the orientation of the page (e.g. by making a 180 degree rotation).

**Note:** The TITLE action should not specify any commands for Stapling, because the Cover page is only 1 page.

### Settings/Values:

| ^^^ [P.JL.02] | Interpretation    | #  | Position of staple(s) | Orientation of staple(s) | Document orientation | Paper feed direction required |
|---------------|-------------------|----|-----------------------|--------------------------|----------------------|-------------------------------|
| OFF           | off / no stapling | -- | --                    | --                       |                      | --                            |
| LEFTTOP       | TLH/V             | 1  | Top-Left              | Horiz./Vert. (*)         | (*)                  | (*)                           |

### Note: (\*)

The stapling orientation is determined by

- the P.JL SET STAPLE command sent,
- the required staple position,
- the required duplex mode,
- the orientation of the document,
- the available feed directions of the paper.

To determine the possible combinations and the commands to be sent, please refer to the table in the section "Combinations of Feed direction, Orientation, Duplex, Stapling" below.

Only [DC142bF] supports stapling.

### Dependencies/Constraints:

- Stapling requires that a Finisher Unit is installed
- Bypass Tray => no Stapling
- For Stapling, Duplexing, Orientation, and Paper feed direction, only certain combinations make sense and are permitted. See chapter "Limitations" below.
- Stapling is disabled for these Media types: "Middle Thick", "Thick 1", "Thick 2", "Thick 3", "Special", "Special 2", "Special 3", "Cardstock", "Transparency", "Labels", "Waterproof", "Envelope" and "Coated".
- Multiple copies should always be specified as Collated.
- The Input bin should be set to Auto Select, or it must be ensured that the paper in the tray is set in the correct paper feed direction.
- The paper supported and the maximum number of sheets that can be stapled are specified in the chapter "Device Hardware Accessories" above.
- The P.JL SET STAPLE command forces the print job to a specific output bin that supports stapling. On all finishers stapled output is printed to the "Finisher Shift Tray". If a different output bin is explicitly specified (at tag [P.JL.16] or [PCL.02]), that setting will be overridden by the above and thus become void.

### Note:

It is recommended to always explicitly specify the Duplex mode, as indicated in the section "Duplex mode" above, in order to override any existing Duplex mode setting on the device, which could be in conflict to the desired Stapling mode.

### Note: (The SAP mechanism to specify the Stapling Mode)

- For ABAP and non-POSS systems:

There is no SAP mechanism.

- For SAPscript and SmartForms under POSS:

The Stapling Mode can be configured using POSS option 08. For more information please refer to the section on POSS in Volume 2.

### 3.6.1 Tag: # [P.JL.02] STAPLING MODE

#### Command syntax:

- @P.JL SET STAPLE = ^^ \r\n

#### Initial / Example:

- #@P.JL SET STAPLE = OFF \r\n

## 3.7 Punching

This feature is NOT supported by this device.

### 3.7.1 Tag: # [PJL.03] PUNCHING MODE

This command is NOT supported by this device.

## 3.8 Resolution

### Description:

By default, the horizontal and vertical printer resolution, in dots per inch (dpi), is 600 dpi.

In case of memory or speed problems, or for draft prints, you may wish to switch to 300 dpi.

If resolution is changed, the memory is reconfigured, and all downloaded fonts and PCL macros are lost.

### Settings/Values:

| ^^^ [(*)] | Interpretation |
|-----------|----------------|
| 600       | 600 dpi        |
| 300       | 300 dpi        |

**Note:** (\*): The same value must be set at both places !

### 3.8.1 Tag: # [PJL.01] RESOLUTION 1/2

#### Command syntax:

- @PJL SET RESOLUTION = ^^ \n

#### Initial / Example:

- @PJL SET RESOLUTION = 600 \n

### 3.8.2 Tag: # [PCL.14] RESOLUTION 2/2

#### Command syntax:

- \e&u^^D

#### Initial / Example:

- \e&u600D

## 3.9 Copies

### Description:

Number of copies to print of this job.

For example, for 4 copies of a 3-page document,

- **Uncollated** copies will appear as 1,1,1,1,2,2,2,2,3,3,3,3.
- **Collated** copies will appear as 1,2,3,1,2,3,1,2,3,1,2,3.

### Settings/Values:

^^ = { 1,...,999 }

### Dependencies/Constraints:

- Please note that this may conflict with some SAP Output Management System software.

### Note: (PCL/PJL)

There are two PJL commands and one PCL command related to specifying the number of copies and the collation mode.

Initially, both PJL commands are commented out, and the PCL command specifies 1 copy.

If either PJL command is used, the other one and the PCL command need to be commented out to avoid conflicts.

For Collated mode, the PJL QTY command is needed.

For Uncollated mode, either PJL COPIES or the PCL command can be used.

If both PJL and PCL commands are used, the PCL setting will override the PJL setting.

### Note: (Increasing the performance of network printers)

It is possible to specify the desired number of copies directly in the print data stream, using one of the commands below. Since the spool system cannot know the contents of the data stream, it has to be told explicitly that N = 1, to avoid any conflict.

If a certain class of print jobs always requires the same fixed number of copies, the administrator may choose

1. to create a dedicated device type which sends the appropriate command, and
2. to tell his users to always keep N = 1 in the Print parameters dialog.

**Note:** The above does not work in conjunction with the HPL2 ABAP list driver, since it overrides this setting; it always forces only 1 copy.

### 3.9.1 Tag: # [PJL.15] COPIES 1/2

**Command syntax:**

- @PJL SET QTY = ^^^ \r\n -- [PJL.15a] (for Collated)
- @PJL SET COPIES = ^^^ \r\n -- [PJL.15b] (for Uncollated)

**Initial / Example:**

- #@PJL SET QTY = 1 \r\n
- #@PJL SET COPIES = 1 \r\n

### 3.9.2 Tag: # [PCL.13] COPIES 2/2

**Command syntax:**

- \e&I^^X

**Note:**

This PCL command will just print uncollated copies.  
It needs to be commented out if one of the above PJL commands is used.

**Initial / Example:**

- \e&I1X

## 3.10 EconoMode (Toner Saver)

**Description:**

For draft printouts, the EconoMode can be activated to save toner.  
For normal operation, this feature should be deactivated.

**Settings/Values:**

| ^^^ [PJL.14] | Interpretation             |
|--------------|----------------------------|
| OFF          | disabled (normal printing) |
| ON           | enabled                    |

**Note:** (The SAP mechanism to specify the EconoMode)

- For ABAP and non-POSS systems:

There is no SAP mechanism.

- For SAPscript and SmartForms under POSS:

The EconoMode can be configured using POSS option 10. For more information please refer to the section on POSS in Volume 2.

### 3.10.1 Tag: # [PJL.14] ECONOMODE (TONER SAVER)

**Command syntax:**

- @PJL SET ECONOMODE = ^^^ \r\n

**Initial / Example:**

- #@PJL SET ECONOMODE = OFF \r\n

## 3.11 Auto Tray Change/Switching

**Description:**

If enabled, and the current tray runs out of paper, the job will be continued from a tray containing the same paper size.  
If disabled, the front panel LCD will prompt the user to refill paper and wait.  
This should be disabled in case there are e.g. 2 different types of A4 paper (e.g. normal, colored) which should not be mixed.

**Settings/Values:**

| ^^^ [PJL.12] | Interpretation |
|--------------|----------------|
| OFF          | disabled       |
| ON           | enabled        |

### 3.11.1 Tag: # [PJL.12] AUTOTRAYCHANGE

**Command syntax:**

- @PJL SET AUTOTRAYCHANGE = ^^^ \r\n

**Initial / Example:**

- #@PJL SET AUTOTRAYCHANGE = ON \r\n

## 3.12 Edge Smoothing/Enhancement

This feature is NOT supported by this device.

### 3.12.1 Tag: # [PJL.11] SMOOTHING

This command is NOT supported by this device.

## 3.13 Paper Size

### Description:

Determines the paper size to be used for the current page.

The **physical height** and **width** of the sheet or envelope are specified below.

The engine's mechanics implies an unprintable area near the edges, so that the **imageable area** is usually smaller. This is device-dependent.

Paper may be treated differently, depending on with which edge the sheets are fed into the paper path (**feed direction**).

- **LEF** = Long-edge-feed
- **SEF** = Short-edge-feed

(This notion of feed direction is independent of the notion of orientation.)

In the paper sizes below the first value specified is the feed edge.

#### Note: (Configuring the Paper size)

This setting cannot be configured effectively in the "Printer initialization" action of the device type, because there are other mechanisms which would override it.

For a **SAPscript** document, its paper size is configured in the "Page format" setting in the SAPscript Form used by the document, which in turn determines the Device format to be used. For the SAP standard paper sizes (A3, A4, A5, Letter, Legal, Executive), the command sent is built in the HPL2 SAPscript OTF driver, otherwise (for non-standard paper sizes) it has to be specified at the end of the Printer initialization action of the corresponding Device format.

For an **ABAP** report, the paper size to be used is always assumed to be A4 or Letter; however, the "Printer initialization" action does not send any paper size command.

In any case, the command syntax is explained below.

#### Note: ("Sub paper size")

Normally, a print job specifying a certain paper size would require that paper of this size be loaded in a tray.

If paper of this size is not available in any tray, the user will be requested via the device's front panel to load it.

Since A4 and Letter have similar formats, it may be desirable to be able to print a job specifying Letter format on A4 paper, or vice versa. This feature is called "Sub(stitute) paper size". There is no scaling applied; so if the image is too large, it will be cropped at the margins.

This feature can only be set via the device's front panel (Sub Paper Size = Auto); there is no PJL command to achieve this.

### Settings/Values:

| ***  | Name (short) | Full / Alternative names                         | EU/US | Size                       |
|------|--------------|--|-------|----------------------------|
| 26   | A4           | DIN A4 (SEF)                                     | EU    | 210 x 297 mm               |
| 24   | A6           | DIN A6 (SEF)                                     | EU    | 105 x 148mm                |
| 2000 | A5           | DIN A5 (SEF)                                     | EU    | 148 x 210 mm               |
| 25   |              | DIN A5 (LEF)                                     |       | 210 x 148 mm               |
| 45   | B5           | B5(JIS) (SEF)                                    | EU    | 182 x 257 mm               |
| 2020 | B6           | B6(JIS) (SEF)                                    | EU    | 128 x 182 mm               |
| 3    | Legal        | LGL, Legal (SEF)                                 | US    | 8.5" x 14"                 |
| 2    | Letter       | LTR, Letter (SEF)                                | US    | 8.5" x 11"                 |
| 1    | Executive    | Executive (SEF)                                  | US    | 7.25" x 10.5"              |
| 2008 | Statement    | HLT, Half Letter (SEF)<br>HLT, Half Letter (LEF) | US    | 5.5" x 8.5"<br>8.5" x 5.5" |
| 2012 | Folio        | Folio (SEF)                                      | US    | 8.25" x 13"                |
| 2011 | F/GL         | F/GL (SEF)                                       | US    | 8" x 13"                   |
| 2007 | Foolscap     | Foolscap(SEF)                                    | US    | 8.5" x 13"                 |
| 81   | Com-10       | Commercial #10 (SEF)                             | US    | 4.125" x 9.5"              |
| 80   | Monarch      | Monarch(SEF)                                     | US    | 3.875" x 7.5"              |
| 90   | DL           | DL (Designated Long) (SEF)                       | EU    | 110 x 220 mm               |
| 91   | C5           | C5 (SEF)   | EU    | 162 x 229 mm               |
| 2022 | C6           | C6 (SEF)   | EU    | 114 x 162 mm               |
| 2031 | 16K          | 16Kai (SEF)                                      | EU/US | 195 x 267 mm               |
| 2081 | Oficio       | Oficio (SEF)                                     | EU    | 8.5"x13.4"                 |
| 2077 | 8.5 x 12     | 8.5 x 12(SEF)                                    | EU    | 8.5"x12"                   |

### Dependencies / Constraints:

- Some input bins and output bins support only certain paper sizes, and some only in a certain feed direction. See the sections about Input bins and Output bins and the chapter "Device Hardware Accessories" above.
- If no paper select command is sent, the controller will use the paper in the addressed tray, or it may ask to load the paper which is currently specified as default.

**Note:** (Printing envelopes)

To print an envelope, you need to specify these commands:

- (Input bin): The command for the Envelope Feeder or the Bypass tray.
- (Paper size): The command indicated in this section.
- (Orientation): Please note that all envelope sizes require Landscape orientation.

**Note:** (Support of paper sizes by SAP)

Only the entries marked bold are currently fully supported as standard under SAP.

For the procedure on how to support a non-standard paper size, see the corresponding section in Volume 2, Appendix 1.

**Command syntax:**

- `\e&I^A`

**Example:**

- `\e&I26A`

## 3.14 Orientation

**Description:**

The orientation defines how the printed output appears on the physical paper. By definition, "Portrait" means that, in order to read the text, the sheet must be held upright, i.e. with the short edge at the top. (This notion is independent of the notion of paper feed direction.)

**Note:** (Configuring the Orientation)

This setting cannot be configured effectively in the "Printer initialization" action of the device type, because there are other mechanisms which would override it.

For a SAPscript document, its orientation is configured in the "Orientation" setting in the SAPscript Form used by the document. The command is automatically sent by the HPL2 SAPscript OTF driver, using the Print controls SPORT and SLAND, after the command sequence of the "Printer initialization" action. Therefore, the "Printer initialization" action should not send any commands to specify orientation.

For an ABAP report, the orientation is a property of the Device format (X\_II\_cc), which in turn is determined by the number of lines per page and the number of columns. The necessary PCL command is contained at the end of the "Printer initialization" action.

In any case, the command syntax is explained below.

**Settings/Values:**

|  | ^^^ | Interpretation |
|--|-----|----------------|
|  | 0   | Portrait (P)   |
|  | 1   | Landscape (L)  |

**Note:** The values are the digits 0,1, NOT the letters O,I.

**Dependencies/Constraints:**

- For Stapling, Punching, Duplexing, Orientation, and Paper feed direction, only certain combinations make sense and are permitted. See the chapter "Limitations" below.

**Command syntax:**

- `\e&I^O`

**Note:** The last character is the uppercase letter "O".

**Example:**

- `\e&I0O`

## 3.15 Left margin

**Description:**

The left margin of the page.

**Note:** (Configuring the Left margin)

This setting cannot be configured effectively in the "Printer initialization" action of the device type, because there are other mechanisms which would override it.

For a SAPscript document, the horizontal margins are automatically cleared (set to 0) by the HPL2 SAPscript OTF driver, sending the command "<ESC>9" after the command sequence of the "Printer initialization" action.

For an ABAP report, the horizontal margins are automatically cleared (set to 0) when using the HPL2 ABAP list driver. Otherwise no command is sent.

In any case, the command syntax is explained below.

**Settings/Values:**

| ^^^         | Interpretation                                    |
|-------------|---|
| { 0,1,... } | Number of columns (as defined by the current HMI) |

**Command syntax:**

- \e&a^^L

**Example:**

- \e&a5L

### 3.16 Top margin

**Description:**

The top margin of the page.

**Note:** (Configuring the Top margin)

This setting cannot be configured effectively in the "Printer initialization" action of the device type, because there are other mechanisms which would override it.

For a SAPscript document, the top margin is automatically cleared (set to 0) by the HPL2 SAPscript OTF driver, sending the command "<ESC>&I0E" after the command sequence of the "Printer initialization" action.

For an ABAP report, the top margin is automatically cleared (set to 0) when using the HPL2 ABAP list driver. Otherwise no command is sent. In any case, the command syntax is explained below.

**Settings/Values:**

| ^^^         | Interpretation                                  |
|-------------|---|
| { 0,1,... } | Number of lines (as defined by the current VMI) |

**Command syntax:**

- \e&l^^E

**Example:**

- \e&l1E

### 3.17 Horizontal spacing

**Description:** (PCL)

The horizontal spacing defines the distance between two adjacent characters.

In a proportional font, it affects only the width of the space character.

The current horizontal spacing is kept in a variable called **HMI** (Horizontal Motion Index).

It has to be specified as an absolute measure in 1/120 inch.

This determines the number of characters per inch (**cpi**).

The default HMI is  $= 12/120'' = 10 \text{ cpi}$ .

**Note:** (Configuring the Horizontal spacing)

This setting cannot be configured effectively in the "Printer initialization" action of the device type, because there are other mechanisms which would override it. Moreover, after any font select command the HMI is automatically set to a (font-specific) default, and therefore it needs to be specified again.

For a SAPscript document, the horizontal spacing is specified by the HPL2 OTF driver automatically after each font select command of a proportional font (thus only affecting the width of the space character). For fixed-spaced fonts, no command is sent; thus the default pitch of the selected font will be used.

For an ABAP report, the "Printer initialization" action of an X\_II\_cc Format contains a command to override the default pitch of the font used (Courier), thus condensing or expanding it to just the right size so that cc columns will fit properly on the page. The HPL2 ABAP list driver sends the command automatically.

In any case, the command syntax is explained below.

**Settings/Values:**

| ^^^                       | Interpretation                 |
|---------------------------|--------------------------------|
| { <any rational number> } | absolute measure in 1/120 inch |

**Command syntax:**

- \e&k^^H

**Example:**

- \e&k12H

### 3.18 Vertical spacing

**Description:** (PCL)

The vertical spacing defines the distance between two adjacent lines.

The current vertical spacing is kept in a variable called **VMI** (Vertical Motion Index).

It can be specified as number of lines per inch (**lpi**).

The default VMI is  $= 8/48'' = 6 \text{ lpi}$ .

**Note:** (Configuring the Vertical spacing)

This setting cannot be configured effectively in the "Printer initialization" action of the device type, because there are other mechanisms which would override it.

For a SAPscript document, the vertical spacing is initially set to 0 by the HPL2 SAPscript OTF driver, using the command "<ESC>&I0C".

For an ABAP report, the necessary command is contained at the end of the "Printer initialization" action of the format. The HPL2 ABAP list driver overrides this, setting it to 0.

In any case, the command syntax is explained below.

#### Settings/Values:

| AAA                         | Interpretation                 |
|-----------------------------|--------------------------------|
| { 1,2,3,4,6,8,12,16,24,48 } | number of lines per inch (lpi) |

#### Command syntax:

- \e&I^^D

#### Example:

- \e&I6D

## 3.19 Character set

#### Description:

Select/change the active printer character set.

This term is also known as "symbol set" (HP) or "code page" (Microsoft).

It is a table that interprets ASCII codes as characters.

#### Note: (Configuring the Character set)

This setting is not a property of the job or a page but of individual characters. Nor is it an attribute of the font, it is maintained independently. It would make sense to specify an initial value in the "Printer initialization" action of the device type, but it could be overridden at any time.

In a SAPscript document, the character set can be switched by sending an appropriate Print control. (This is currently not implemented.)

This setting is also overridden by the SFxxx font select Print controls issued by the HPL2 SAPscript OTF driver.

For an ABAP report, the initial character set to be used is specified at the end of the "Printer initialization" action.

In any case, the command syntax is explained below.

#### Settings/Values:

| AAA | Interpretation       |
|-----|----------------------|
| 0N  | Latin-1 (ISO 8859-1) |
| 2N  | Latin-2 (ISO 8859-2) |

For the initial setting, see the Example below.

#### Dependencies/Constraints:

- none

#### Note: (Switching the Character set)

At the moment it is not possible to switch between character sets, e.g. to mix both Latin-1 and Latin-2 in the same document.

#### Note: (Support of the EURO character)

The EURO character (€) has been implemented in the symbol sets 19U (Latin-1), 9E (Latin-2), for most typefaces, except LinePrinter, at position 80 (hex).

For this device the resident fonts support the EURO character.

To find out if the device type supports the EURO character, please see Volume 2.

#### Command syntax:

- \e(^^

#### Example:

- \e(0N -- for ZA0x1vvv
- \e(2N -- for ZA0x2vvv

## 3.20 Font

#### Description:

Selects the font to be used, by specifying the following parameters:

- ^^p = proportional
- ^^h = pitch (cpi)
- ^^v = font height (point size)
- ^^s = style (italic)
- ^^b = weight (bold)
- ^^T = typeface

#### Note: (Selecting a font & Configuring font attributes)

This setting is not a property of the job or a page but of individual characters.

It doesn't make sense to specify an initial value in the "Printer initialization" action of the device type, since it will be overridden.



In a SAPscript document, the font to be used for a portion of text is specified by preceding the text with a 2-character tag which is defined as a Character format or Paragraph format in the Form or Style used by the document. The tag maps to a system font and thus to a SFxxx Print control and thus eventually to a font select PDL command sequence.

For an ABAP report, only a fixed-spaced font can be used, in this case COURIER. The font size depends on the format chosen, and it is specified in the "Printer initialization" action of the Device format. The HPL2 ABAP list driver has its own mechanism.

In any case, the command syntax is explained below.

There are no Print controls for changing/specifying a font attribute, because using them would conflict with the existing mechanisms.

**Note:** (OCR text printing)

Printing OCR text requires a separate solution. Please refer to the chapter "Barcodes & OCR Text" in Volume 2 for more information.

**Note:** (Barcode printing)

Printing barcodes requires a separate solution. Please refer to the chapter "Barcodes & OCR Text" in Volume 2 for more information.

**Note:** (Arbitrary size fonts)

For printing fonts in arbitrary sizes, please refer to the chapter "The Fonts" in Volume 2 [ZA0x].

**Settings/Values:**

Please refer to proper PCL documentation.

**Note:** The pitch command (<ESC>&k#H) must be respecified after any font select command. Otherwise a (font-specific) default is used.

**Note:** LinePrinter supports only symbol sets 0N, 2N.

**Command syntax:**

- \e(s^p^h^v^s^b^T

**Example:**

- \e(s0p10h12v0s0b4099T -- This would select normal Courier 10 cpi 12 pt.

## 3.21 Color printing

This feature is NOT supported by this device.

### 3.21.1 Tag: # [PCL.30] COLOR : COLOR MODE

This command is NOT supported by this device.

## 3.22 Slip sheet

**Description:**

This feature allows you to insert a sheet of paper between two consecutive sheets of transparency, thus preventing them from sticking together. The contents and the input bin of the slip sheets can be specified.

**Note:**

Normally transparencies are only A4 or LTR size.

The slip sheets should have the same paper size and feed direction as the transparencies, but come from a different tray.

**Settings/Values:**

| ^^^ [PJL.20a] | Interpretation  |
|---------------|---|
| OFF           | no slip sheet   |
| BLANK         | inserts a blank page  |
| COPY          | inserts a page with a copy of the image of the preceding transparency |

| ^^^ [PJL.20b,c,d] | Interpretation                |
|-------------------|-------------------------------|
| TRAY1             | get the sheet from Tray 1     |
| TRAY2             | get the sheet from Tray 2     |
| TRAY3             | get the sheet from Tray 3     |
| TRAY4             | get the sheet from Tray 4     |
| BYPASS            | get the sheet from the Bypass |

**Dependencies/Constraints:**

- [PJL.20b,c,d] are only interpreted if [PJL.20a] is not "OFF".

**Note:**

It is highly recommended to set the Paper Type to "Transparency" with the command [PCL.12], in order to prevent the device from damage. (The fuser temperature must be lowered for printing transparencies.)

**Note:**

The PJL SLIPSHEETPRINTTRAY command [PJL.20b] specifies the source tray for the slip sheets.

To specify the input tray for the transparencies, the PJL DOCBODYTRAY command [PJL.20c] and the PJL TRAY command [PJL.20d] must be used, both with the same value. Moreover, the [PCL.01] INPUT BIN command must be commented out.

**Note:**

The trays indicated in SLIPSHEETPRINTTRAY, DOCBODYTRAY and TRAY should contain the same paper format in the same feed direction.

### 3.22.1 Tag: # [PJL.20] SLIPSHEET

**Command syntax:**

- @PJL SET SLIPSHEETPRINT = ^^^ \r\n -- [PJL.20a]
- @PJL SET SLIPSHEETPRINTTRAY = ^^^ \r\n -- [PJL.20b]
- @PJL SET DOCBODYTRAY = ^^^ \r\n -- [PJL.20c]
- @PJL SET TRAY = ^^^ \r\n -- [PJL.20d]

**Initial / Example:**

- #@PJL SET SLIPSHEETPRINT = OFF \r\n
- #@PJL SET SLIPSHEETPRINTTRAY = TRAY1 \r\n
- #@PJL SET DOCBODYTRAY = BYPASS \r\n
- #@PJL SET TRAY = BYPASS \r\n

## 3.23 Locked Printing

**Description:**

Locked printing allows to defer the printing out of the sheets of a job until the recipient has walked up to the device and entered a password.

**Note:** (The SAP mechanism to specify Locked Printing)

- For ABAP and non-POSS systems:

There is no SAP mechanism.

- For SAPscript and SmartForms under POSS:

Locked Printing can be configured using POSS option 09 ("User Authentication"). For more information please refer to the section on POSS in Volume 2.

**Note:**

Currently this feature can only be configured via POSS.

If it is needed for printing from ABAP or in a non-POSS environment, please contact Technical Support.

Also in case of different requirements regarding the job parameters displayed, please contact Technical Support.

**Note:** (The procedure under POSS)

To issue a job as locked, the password (of 4..8 alpha-numeric characters) has to be specified upon the creation of the job. Under POSS this has to be done at the "User Authentication" option. Note that, when entering the password, it will not be masked.

For how to release a locked job on the device, i.e. to print it out, refer to the device's Operating Instructions manual. On the panel, the job can be identified by its user id. Our Device type is designed to automatically assign the SAP login name of the creator of the Output request as the user id. For technical reasons, the entries appear with the fixed date "2001/12/31" and time "23:59". Note that a job that was specified with invalid syntax in the job password (e.g. too long), cannot be accessed on the device, even though it appears in the list; the entry can only be removed by rebooting the device.

**Note:** (Cover page)

Together with the Locked printing feature, a cover page should not be specified ! This is because the cover page would be generated as a separate locked print job with the same password. And, a cover page is actually not necessary for printout identification purposes, since the recipient has to walk up to the machine anyway.

## 3.24 Edge-to-Edge Mode

**Description:**

Normally there is a margin along the edges of the sheet.

If this setting is enabled, the logical area for printing almost equals the physical size of the paper; the margins are reduced to approx. 1 mm.

For normal operation, this feature should be disabled.

**Settings/Values:**

| ^^^ [PJL.07] | Interpretation     |
|--------------|--------------------|
| NO           | disabled (default) |
| YES          | enabled            |

**Note:**

The physical printable area may vary depending on the paper size.

### 3.24.1 Tag: # [PJL.07] EDGE-TO-EDGE MODE

**Command syntax:**

- @PJL SET EDGETOEDGE = ^^^ \r\n

**Initial / Example:**

- #@PJL SET EDGETOEDGE = NO \r\n

## 3.25 USERCODE

### Description:

The USERCODE feature allows to tag a print job with a numeric code which identifies the job as having been issued by a certain individual (user) or organizational unit (department, etc.).

This can be used for accounting or billing purposes, for usage statistics, or for user authentication.

For how to register the codes on the devices and how to evaluate the statistics, refer to the corresponding Operating Instructions manual.

### Settings/Values:

The length of the code is max. 8 digits.

The surrounding double-quotes (") are mandatory.

The value of the code can be specified as static/fixed or as dynamic/variable.

In our ZAxX Device type, initially a fixed value is specified as an example.

For how to assign variable codes dynamically at print time, please contact technical support.

### Dependencies/Constraints:

- If the value is too long (> 8 digits), it will not be truncated, but the parameter will be empty !
- If the value contains an invalid character, i.e. a non-digit, the parameter will be empty !

### 3.25.1 Tag: # [PJL.24] USERCODE

#### Command syntax:

- @PJL SET USERCODE = "<usercode>" \r\n

#### Initial / Example:

- #@PJL SET USERCODE = "01234567" \r\n

## 3.27 Job Separation

### Description:

This feature allows the separation of consecutive jobs by side-wise shifting. (In contrast, the "Job Offset" feature controls the separation of multiple copies of the same job.) Job separation can be configured through the PJL JOBSEPARATION variable.

### Settings/Values:

| ^^^ [PJL.27] | Interpretation  |
|--------------|---|
| OFF          | No separation.  |
| ON           | Output is offset side-wise versus the previous job. (Other than for Job Offset, rotation is not supported.) |

### Dependencies/Constraints:

- "ON" requires the output to arrive in the Finisher Shift Tray.
- Stapled output is not shifted.

### Note: (The SAP mechanism to configure Job Separation)

- For ABAP and non-POSS systems:

There is no SAP mechanism.

- For SAPscript and SmartForms under POSS:

Job Separation can be configured using POSS option 05. For more information please refer to the section on POSS in Volume 2.

### 3.27.1 Tag: # [PJL.27] JOB SEPARATION

#### Command syntax:

- @PJL SET JOBSEPARATION = ^^ \r\n

#### Initial / Example:

- #@PJL SET JOBSEPARATION = OFF \r\n

## 4. Limitations

There are no device-specific or controller-specific limitations related to combinations of several features.

For **device-specific limitations of a single feature**, see under "Dependencies/Constraints" of the corresponding section above.

For **device-independent limitations** related only to the SAP device type used, please refer to the "Limitations" chapter of the corresponding Volume 2.

## 5. (Appendix 1): Printer Languages

This chapter gives a brief introduction of each printer language used by the printer controllers of our devices.

### 5.1 PCL

The HP **PCL Printer Language** (PCL) is a **page description language** (PDL). That means it is used to specify the contents and format of a page.

The general syntax of a PCL command is:

- <ESC> <character> <letter> <value> <letter>

**Note:**

- Please be aware that the syntax is case-sensitive.
- In "\e&I^^H" etc., "l" is the lowercase letter "L" not the digit "1" !
- In "\e&I^^O" etc., "O" is the uppercase letter "O" not the digit "0" !
- Do NOT introduce any extra blanks.

**PCL5e** is the version that most of our black-and-white devices use.

**PCL5c** is the version that our color devices use.

For detailed information, please refer to the "PCL5 Printer Language Technical Reference Manual" from HP.

#### 5.1.1 PCL macros

PCL allows to define and execute **macros**. A macro is identified by a number (<#>).

- |                 |                      |
|-----------------|----------------------|
| • <ESC>&f<#>y0X | start define macro # |
| • <ESC>&f<#>y1X | stop define macro #  |
| • <ESC>&f<#>y2X | execute macro #      |
| • <ESC>&f<#>y3X | call macro #         |

### 5.2 PJP

The HP **Printer Job Language** (PJP) is a **job control language**.

That means it controls parameters of a whole job, not of individual pages.

Normally all PJP commands are sent at the beginning of a job, and then it switches to some page description language.

The general syntax of a PJP command is:

- @PJP SET <keyword> = <value> [<CR>]<LF>

**Note:**

- Please be aware that the syntax is case-sensitive.
- The white spaces in front of and behind the "=" sign are optional.
- Do NOT introduce any blanks behind the <CR><LF>.

For detailed information, please refer to the "PJP Technical Reference Manual" from HP.

## 6. (Appendix POSS): Support of POSS options for [DC142]

The following table shows the support of POSS options and option values on this device model.

**Legend:** + = supported, o = optional (supported if device hardware option), -- = not supported.

| Value | PCL       | Description   | Supp. |
|-------|-----------|---|-------|
|       | [PCL.01]  | L \p<POSSOPT:01> -- <b>Input bin</b>                            | +     |
|       |           | \e&l_H  |       |
| -1    | 8         | Tray 1  | +     |
| -2    | 1         | Tray 2  | o     |
|       |           |   |       |
| -3    | 4         | Tray 3  | o     |
| -4    | 30        | Tray 4  | o     |
| -15   | 23        | Tray 5  | -     |
| -16   | 24        | Tray 6  | -     |
| -17   | 25        | Tray 7  | -     |
|       |           |   |       |
| -5    | 5         | LCT (Large Capacity Tray)                                       | -     |
|       |           |   |       |
| -21   | 2         | Bypass  | +     |
|       |           |   |       |
| -23   | 25        | Tray 7(T1)  | -     |
| -24   | 26        | Tray 8(T2 )   | -     |
| -25   | 27        | Tray 9(T3 )   | -     |
| -26   | 28        | Tray 10(T4)   | -     |
|       |           |   |       |
| -27   | 31        | Tray A  | -     |
|       |           |   |       |
| -31   | 26        | Tray T1   | -     |
| -32   | 27        | Tray T2   | -     |
| -33   | 28        | Tray T3   | -     |
| -34   | 29        | Tray T4   | -     |
|       |           |   |       |
| -90   | 7         | Auto Tray Select  | +     |
|       |           |   |       |
|       | [PCL.02]  | L \p<POSSOPT:02> -- <b>Output bin</b>                           | +     |
|       |           | \e&l_G  |       |
| -1    | 1         | Inner Tray 1 (Lower Tray) (Standard Tray)                       | +     |
| -2    | 100       | Inner Tray 2 (Upper Tray) (Internal Tray 2)                     | o     |
|       |           |   |       |
| -3    | 101       | Finisher Shift Tray   | +     |
| -4    | 2         | Finisher Proof Tray   | -     |
| -5    | 102       | Finisher Booklet Tray   | -     |
|       |           |   |       |
| -6    | 103       | Right Tray /External Tray                                       | -     |
|       |           |   |       |
| -7    | 108       | Finisher shift tray 2   | -     |
|       |           |   |       |
| -10   | 3         | Mailbox Proof Tray  | -     |
| -11   | 4         | Mailbox Tray 1  | -     |
| -12   | 5         | Mailbox Tray 2  | -     |
| -13   | 6         | Mailbox Tray 3  | -     |
| -14   | 7         | Mailbox Tray 4  | -     |
| -15   | 8         | Mailbox Tray 5  | -     |
| -16   | 9         | Mailbox Tray 6  | -     |
| -17   | 10        | Mailbox Tray 7  | -     |
| -18   | 11        | Mailbox Tray 8  | -     |
| -19   | 12        | Mailbox Tray 9  | -     |
|       |           |   |       |
| -21   | 105       | Stacker 1   | -     |
| -22   | 106       | Stacker 2   | -     |
| -23   | 104       | Stacker Proof   | -     |
| -24   | 107       | Stacker 2 Proof   | -     |
|       |           |   |       |
|       | [PCL.30]  | L \p<POSSOPT:03> -- <b>Colour mode</b> -- only if [color model] | +     |
|       |           |   |       |
|       | [PCL.03]  | L \p<POSSOPT:04> -- <b>Duplex mode</b> -- only if [dpx unit]    | +     |
|       |           |   |       |
|       | [P.JL.13] | C \p<POSSOPT:05> -- <b>Job separation</b>                       | +     |
|       |           |   |       |
|       | [P.JL.03] | L \p<POSSOPT:07> -- <b>Punching mode</b>                        | -     |

|     | xxx // yyy                     | @PJL SET PUNCH=xxx // @PJL SET PUNCHHOLE=yyy   |   |
|-----|--------------------------------|--|---|
| -10 | LEFTPORT // JP2                | Left Edge (2 holes EU) (req LEF/SEF)   | - |
| -20 | TOPPORT // JP2                 | Top Edge (2 holes EU) (req SEF/LEF)  | - |
| -11 | LEFTPORT // EU4                | Left Edge (4 holes EU) (req LEF/SEF)   | - |
| -21 | TOPPORT // EU4                 | Top Edge (4 holes EU) (req SEF/LEF)  | - |
| -12 | LEFTPORT // US2                | Left Edge (2 holes US) (req LEF/SEF)   | - |
| -22 | TOPPORT // US2                 | Top Edge (2 holes US) (req SEF/LEF)  | - |
| -13 | LEFTPORT // US3                | Left Edge (3 holes US) (req LEF/SEF)   | - |
| -23 | TOPPORT // US3                 | Top Edge (3 holes US) (req SEF/LEF)  | - |
| -14 | LEFTPORT // NEU4               | Left Edge (4 holes NE) (req LEF/SEF)   | - |
| -24 | TOPPORT // NEU4                | Top Edge (4 holes NE) (req SEF/LEF)  | - |
| -90 | OFF                            | Off  | - |
|     |                                |  |   |
|     | [PJL.02] (...)                 | L \p<POSSOPT:08> -- <b>Stapling mode</b>   | + |
|     | xxx                            | @PJL SET STAPLE= xxx   |   |
| -1  | LEFTTOP                        | Top-Left Corner  | + |
| -3  | LEFT2PORT                      | Left Edge (req LEF/SEF)  | - |
| -4  | TOP2PORT                       | Top Edge (req SEF/LEF)   | - |
| -5  | STAPLELESSLEFTTOP<br>SLANTPORT | Top-Left Corner (Slanted & Stapleless)   | - |
| -2  | LEFTTOPSLANTPORT               | Top-Left Corner (Slanted) (may req SEF/LEF)  | - |
| -90 | OFF                            | Off  | + |
|     |                                |  |   |
|     | (...)                          | U \p<POSSOPT:09> -- <b>User password</b>   | + |
|     |                                |  |   |
|     | (...)                          | C \p<POSSOPT:10> -- <b>Vendor-defined 1: Draft print (Toner Saver)</b> -- only if not<br>[color model] | + |
|     |                                |  |   |